 


Unplugging the SMART Board

Locate the USB or power plug giving the SMART Board power (look for the light on the left side of SMART Board or on the pen tray)

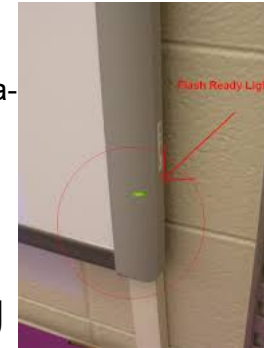

* unplug the USB connector and power to computer and SMART Board. You should hear a unique "Da-dunk" sound when the SMART Board is no longer connected to your computer.



You can now proceed with cleaning the SMART Board when it is turned off. When finished cleaning, plug in the USB connector (you may need to restart your computer) to get the solid green light to show that the pen tray and SMART Board are working again.

- ✓ solid green = SMART Board is working.
- ✓ flashing green = SMART Board works but pen tray does not.
- ✗ red light = SMART Board is not working. Re-connect USB/ power supply and reboot computer

Cleaning your SMART Board



Windex

OR

 


Expo cleaner

with



Dry erase marker
on top of permanent

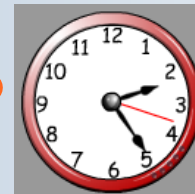

Wait 30 seconds
or so



Orienting the SMART Board



To quickly access the orientation screen **press the two buttons on the pen tray** (directly below the eraser) simultaneously. To complete the orientation process, touch each point at its direct center. The computer will record your screen press upon release. If you want to go back to the previous point, press one of the two buttons.